


Organise sufficient manpower to cope with barrowing up to 50 metres



Ensure that the barrow run is as simple as possible  
ie: provide planks etc to overcome steps and protect grass




Ensure that the shuttering is strong enough to hold 'x' tonnes of concrete (1/4" ply will not do!!)

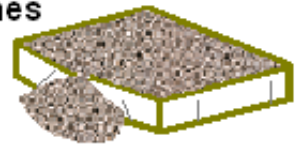


Ensure that your backfill on bases allows for the correct thickness of concrete



Protect brick pavier driveways etc from concrete splashes

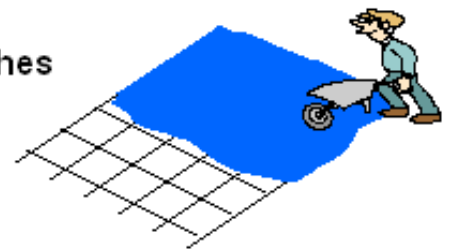


Lock all pets away

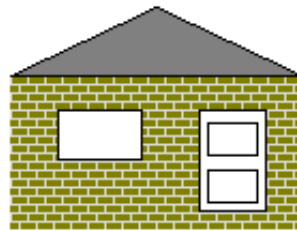

Ensure that you have all the tools required ie:

Wheelbarrow (ABFAB carry two)

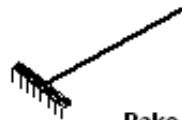

Rake



Shovels



Spirit level

Steel Float



Tamping Bar



Remember concrete is a thick liquid, is very heavy and you get one chance to "get it right"